 


Play/Pause

Press to play or pause the audio player.

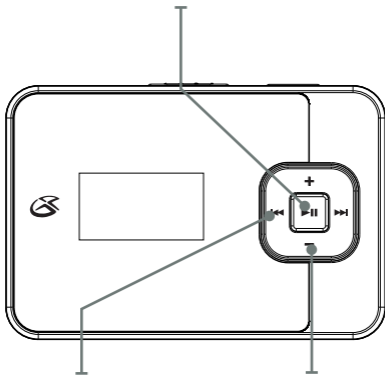

Skip/Search

 
Press to skip.
Press and hold to search through tracks.

Volume

Press to adjust the volume.


Off/On/Hold

Adjust to power the unit off, on or enter Hold mode.



Mode

 In play mode, press to access the sub-menu. Use the **Volume** and **Play/Pause** buttons to select EQ or Repeat mode. Press again to exit the sub-menu.

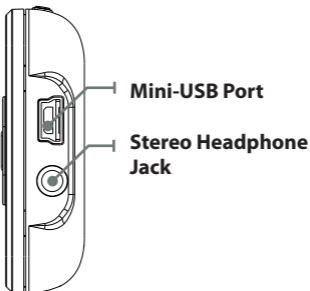

Music

Loading music

1. Connect the digital audio player to a computer using the **Mini-USB Port** and a USB cable (included).
 2. Once connected, the unit will show up on the connected computer as if it were a connected USB thumb drive, external hard drive, or memory card.
 3. Drag and drop the desired audio files into the unit's drive location on the connected computer.
 4. After the files are loaded onto the unit, right-click on the drive and eject it from the computer, then disconnect the USB cable.
-

Playing Music

1. Adjust the **Off/On/Hold** button to the On position to power on the digital audio player
2. Press the **Play/Pause** button to begin playing music from your digital audio player.

*Press the **Mode** button to access the sub-menu. Use the **Volume** and **Play/Pause** buttons to select EQ or Repeat mode.*

Press again to exit the sub-menu.

File Compatibility:

MUSIC: MP3, WMA (non-DRM), WAV

Company Information

International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at www.gpx.com.

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.gpx.com.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.gpx.com.

Contact Information

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Website: www.gpx.com

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com.



Trademarks appearing herein are the property of their respective owners.

Warnings

 
WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Power

DC battery power:
requires 1 AAA
battery
(not included)

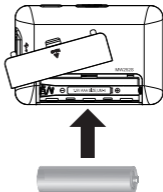



USER'S GUIDE
V:563-01



MW252S

MP3 Digital Audio Player

For the most up-to-date version of this
User's Guide, go to **www.gpx.com**